
Canyon ADVENTURE VANS

INSTALLATION GUIDE · PRO SERIES™

CABINET SHELF DRIVER SIDE

Jayco Terrain / Entegra Launch · Large driver side cabinet

IN THE BOX

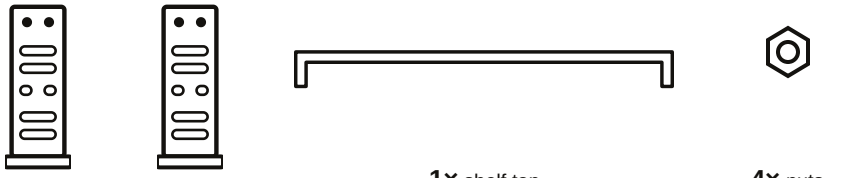

1× left leg

1× right leg


1× shelf top
30" W × 13.5" D × 5" H

4× nuts
2 left + 2 right

YOU'LL NEED


- Wrench or socket for the nuts
- Empty cabinet
- About 5 minutes
- No drilling required

1 SET THE LEGS

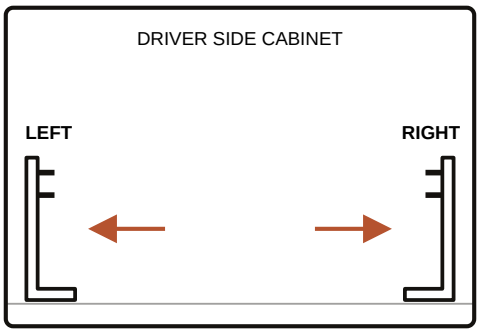


Empty the cabinet. Set the left leg against the left side and the right leg against the right side, feet flat on the cabinet floor, with the bolts at the top of each leg pointing in toward the middle.

2 SLIDE THE TOP DOWN

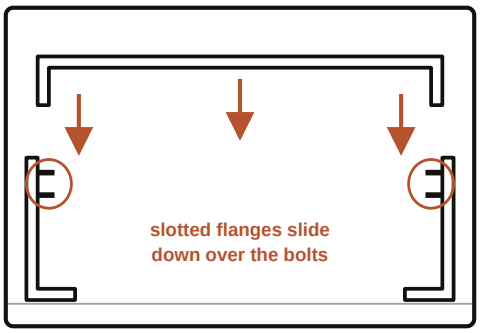


Lower the shelf top between the legs so the slotted flange on each end slides down over the bolts on the inside of each leg. Keep the shelf level as it seats.

3 ADD NUTS & TIGHTEN

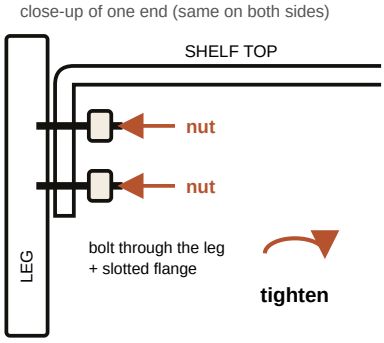

From inside the cabinet, thread a nut onto each bolt where it comes through the flange, 2 on the left and 2 on the right, and tighten them down until the shelf is solid. Don't over-tighten.

4 LOAD FLOOR TO CEILING

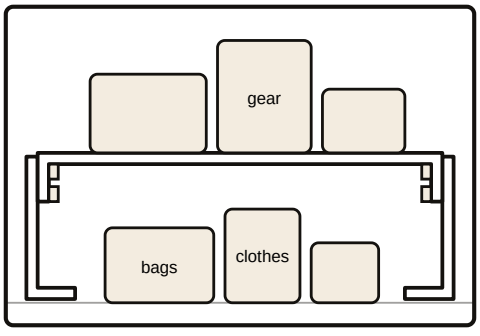

Bags and clothes go on the bottom, more gear stacks on top of the shelf all the way to the ceiling. Grab what you need without unloading the whole cabinet.

Tip: Put the gear you use most on the shelf so it's right at the door. **Need help?** Our team is happy to walk you through it.

(747) 202-0354 · info@canyonadventurevans.com · canyonadventurevans.com