
Canyon ADVENTURE VANS

INSTALLATION GUIDE · PRO SERIES™


LARGE SHOWER DOOR MOLLE PANEL

Jayco Terrain / Entegra Launch · Large shower door


IN THE BOX (PER PANEL)

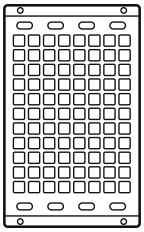

1× MOLLE panel
26" H × 16" W



2× 3M adhesive strips
top + bottom (pre-applied)




4× screws

YOU'LL NEED


- Screwdriver or drill/driver
- Rubbing alcohol + clean cloth
- Tape measure or pencil (optional)
- About 10 minutes

1 CLEAN & PEEL

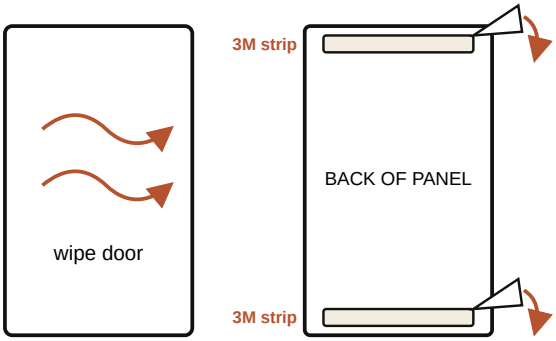


Wipe the inside of the shower door with rubbing alcohol and let it dry. Then peel the liners off the two 3M adhesive strips on the back of the panel, one behind the top screw holes and one behind the bottom.

2 CENTER ON THE DOOR

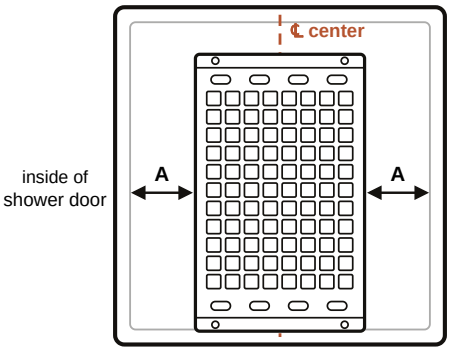


Hold the panel against the door without touching the adhesive to the surface yet. Center it left to right (A = A) and keep it straight up and down.

3 PRESS FIRMLY

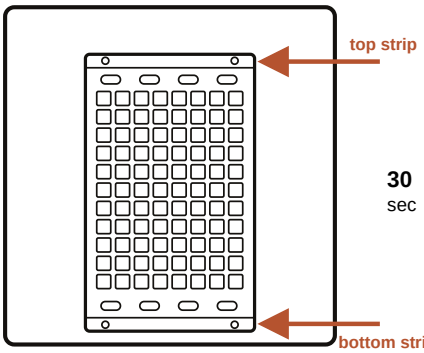

Press the panel onto the door and hold firm pressure over the top and bottom adhesive strips for about 30 seconds so they bond.

4 SECURE WITH 4 SCREWS

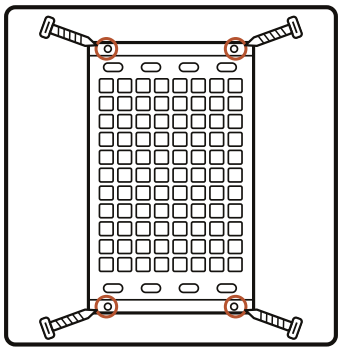

4×

Drive the 4 included screws through the mounting holes, 2 across the top and 2 across the bottom, and into the door. Snug them down; don't over-tighten. Then add your shelves, trays, hooks and MOLLE bags.

Ordered 2 panels? Install the upper panel first, then repeat steps 1–4 for the lower panel directly below it, lined up on the same center line. **Need help?** Our team is happy to walk you through it.

(747) 202-0354 · info@canyonadventurevans.com · canyonadventurevans.com