


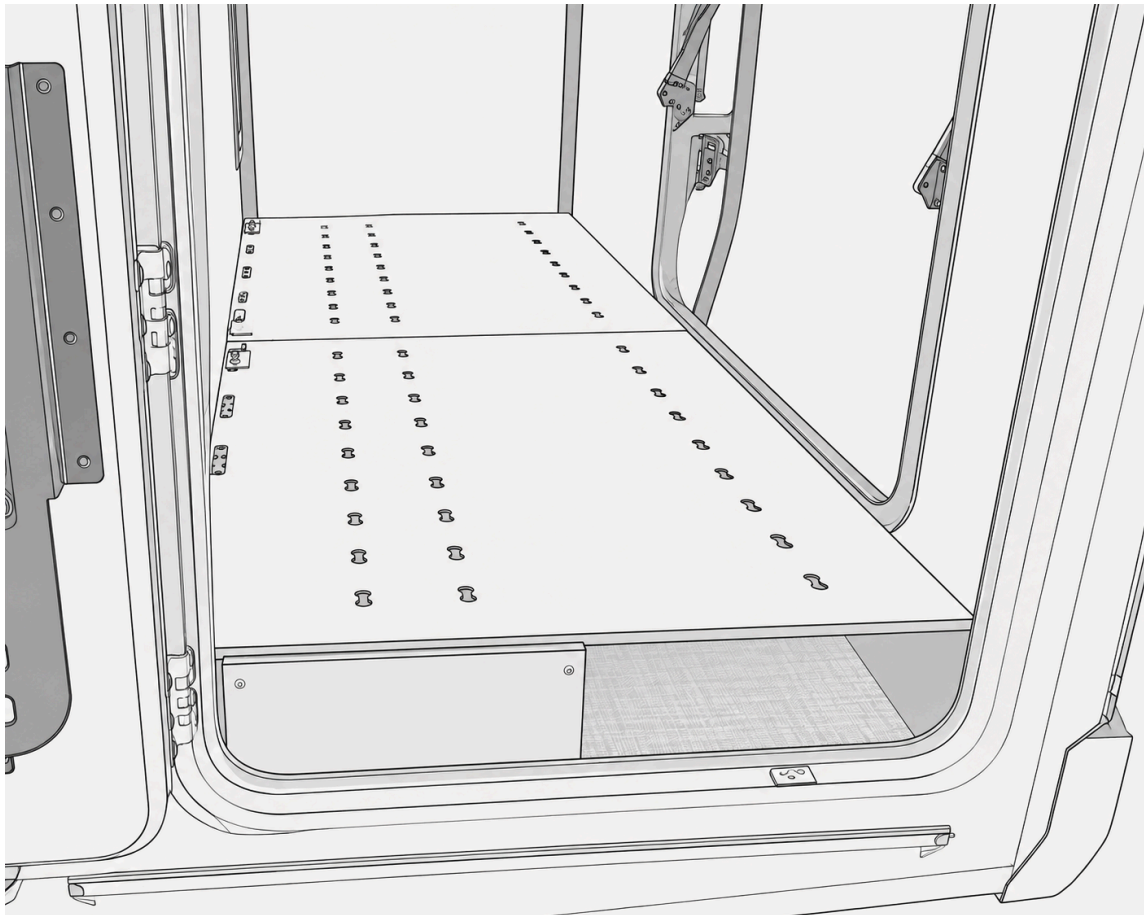


Ekko Garage Platform

Installation Guide




Included in Kit:

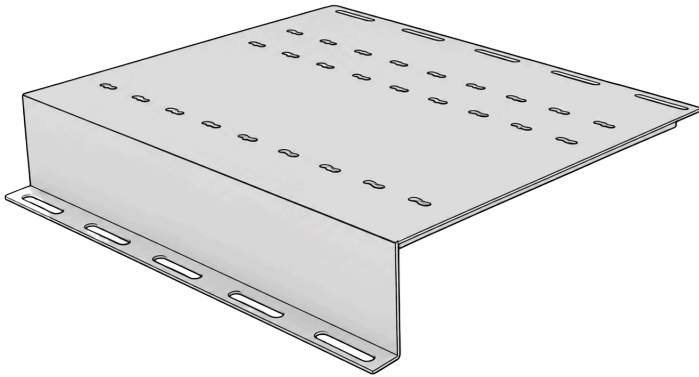


(2x) Ekko Garage Platforms


Hardware Included:

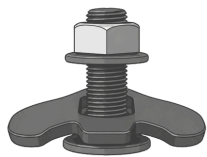

(8x)
L-Track Studs

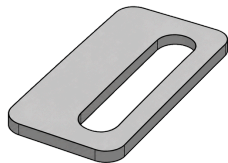


(8x)
Bracket

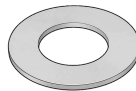


(8x)
Washers

Tools required:



Phillips
Screwdriver

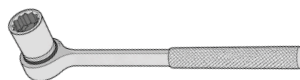

9/16" Socket
Wrench




Socket Wrench
Extension 6" or more

Step 1:

Empty your Ekko garage for a clear install area. Set out tools and hardware.



Step 2:

Remove the existing trim piece from base. Unscrew the 10 screws located on the front and top edges of trim piece.

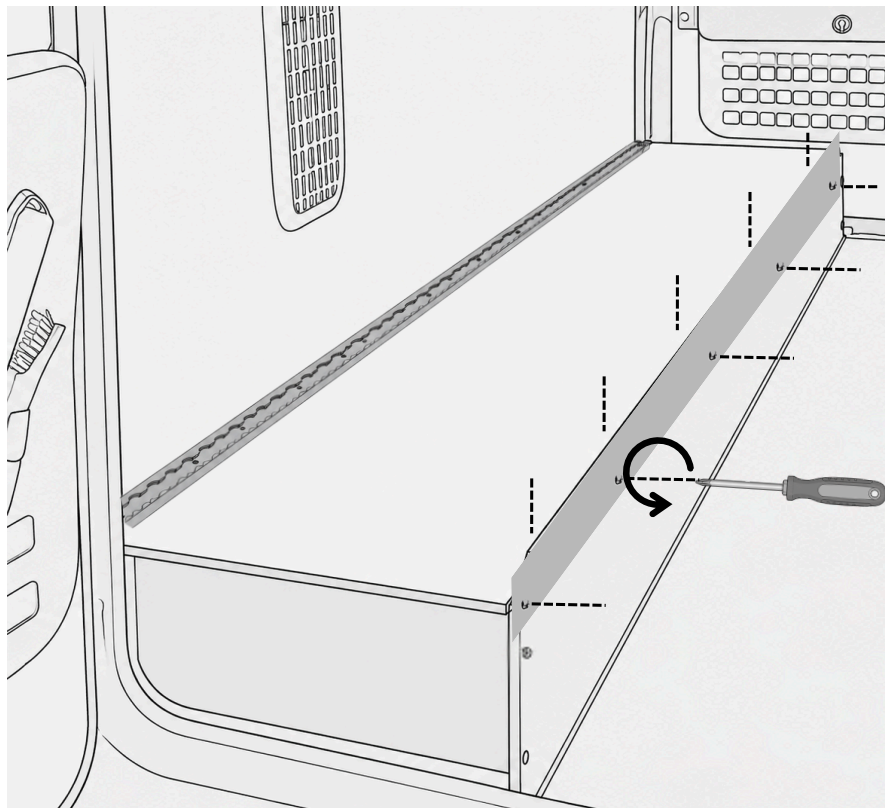


Step 3:

Lay Ekko Garage Platform on top of L-track rails. Once platform is seated, close door to test fitment.

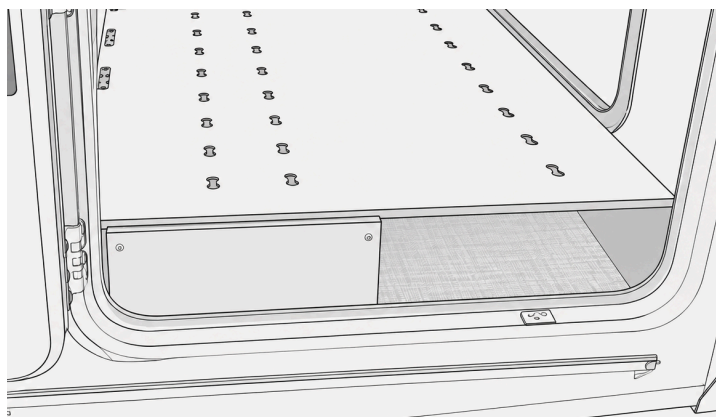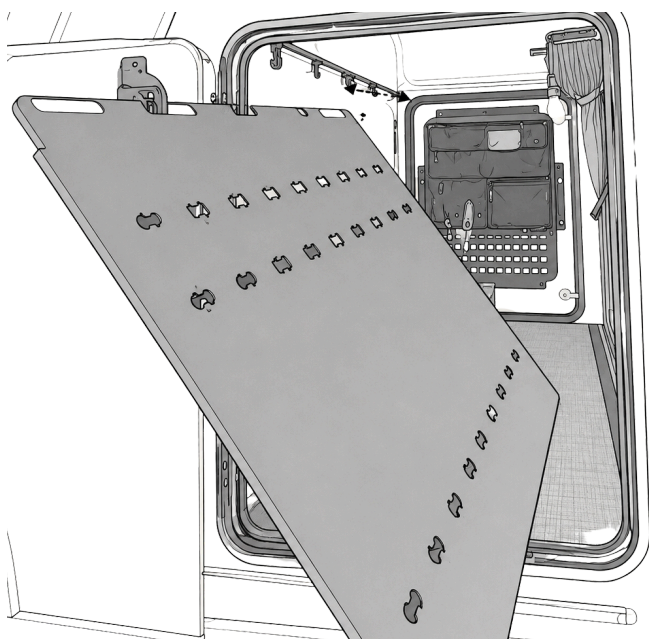





Step 4:

Remove nut and wing from (4x) L-track studs.

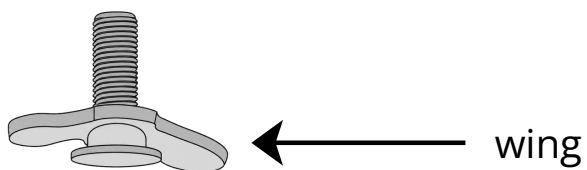

Step 5:

Slightly lift Platform to access L-track on garage base. Determine the 2 mounting points along L-track to align with corresponding slots in Platform. Insert the (2x) L-track studs and attach wings to studs. The wing will lock the L-track stud into place.

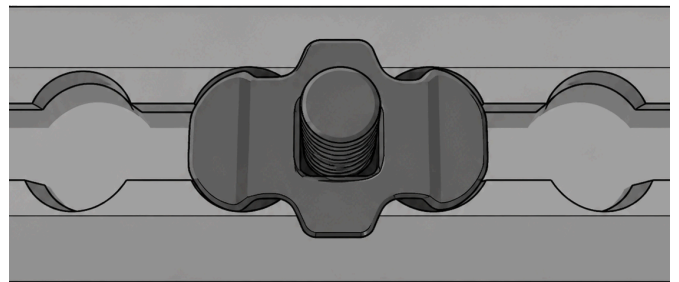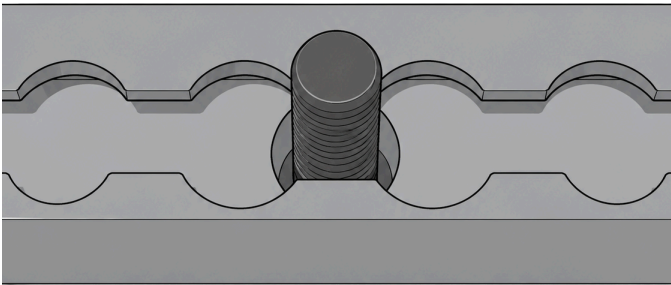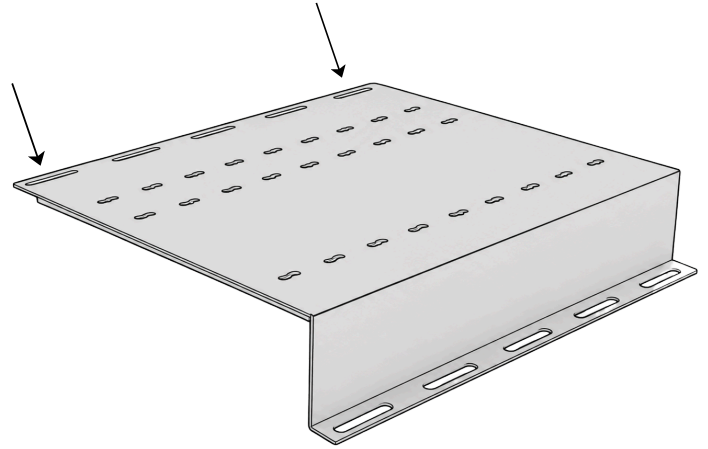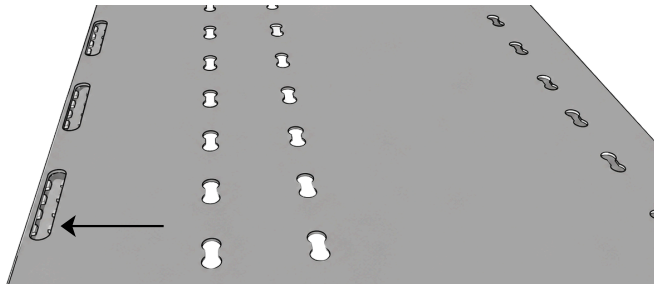


Step 6:

Carefully set Garage Platform over L-track studs. Test door clearance by closing/opening Ekko door.


Step 7:

Insert (2x) brackets, washers and nuts onto L-track studs. Use 9/16" socket wrench to partially tighten nuts. Do not fully tighten until Step 10.

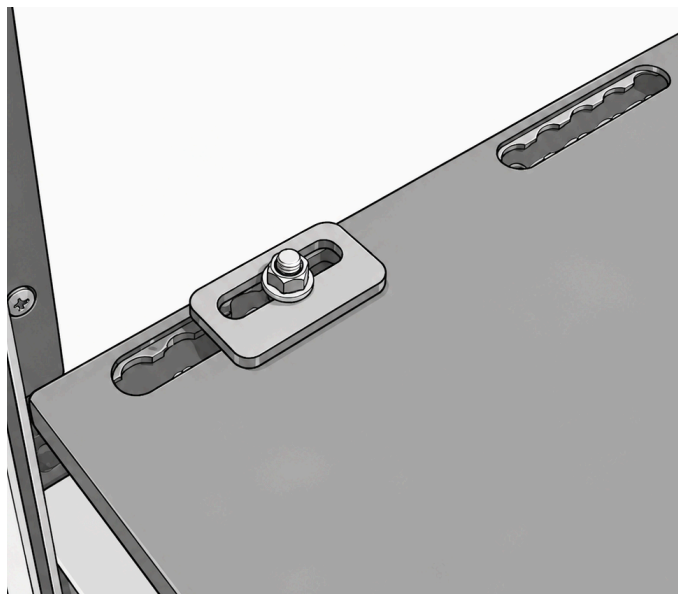


Step 8:

Lift lower portion of Garage Platform to access lower L-track. Insert remaining (2x) L-track studs and wings into slots. Set Garage Platform gently onto studs.

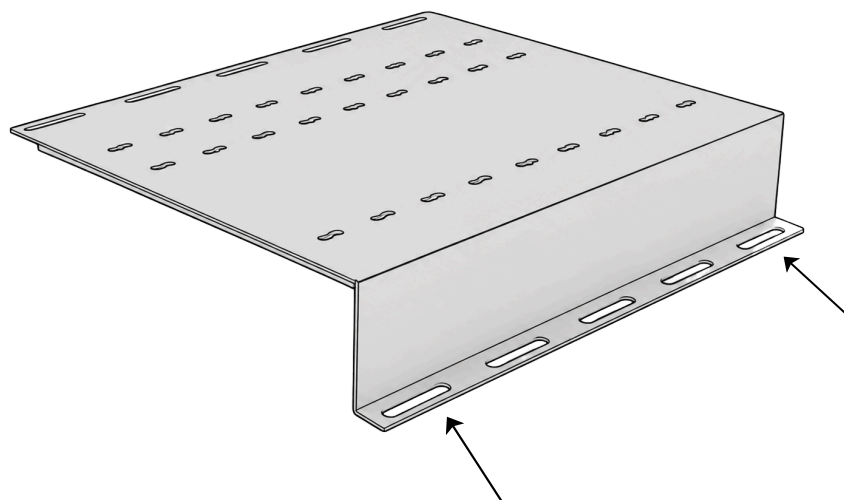

Step 9:

Repeat Steps 3 - 8 to install second Garage Platform.

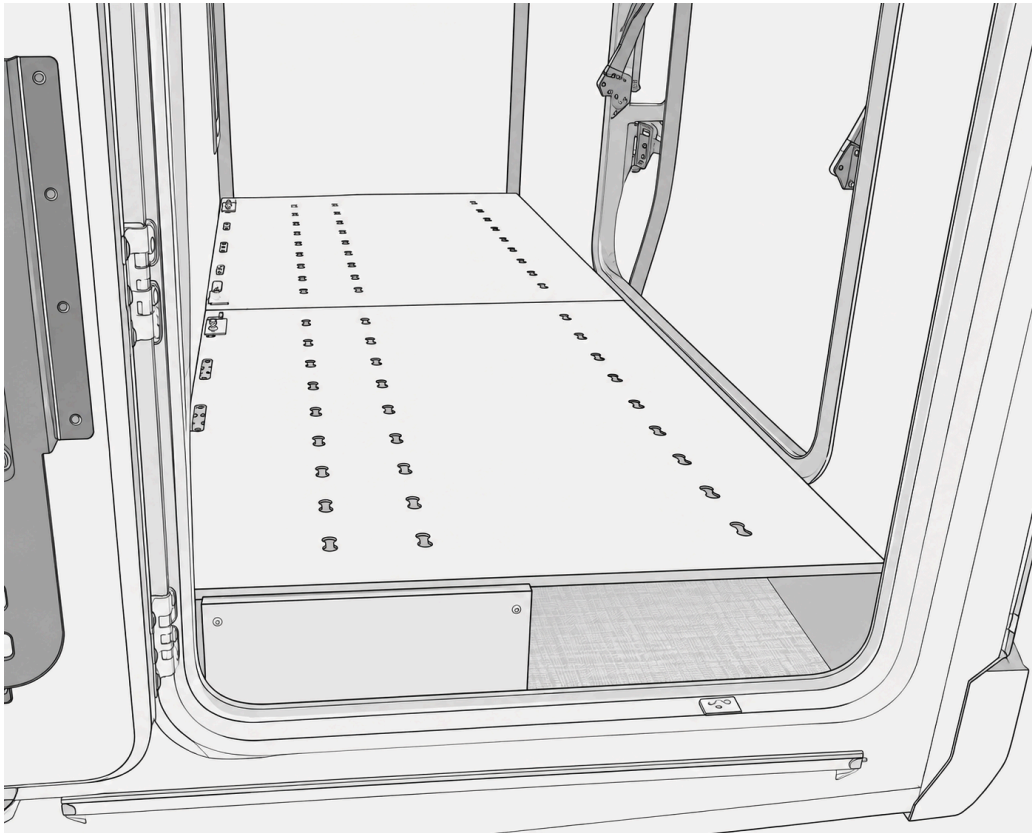

Questions? Feel free to reach out to our customer service team, we're happy to help!

✉ info@canyonadventurevans.com ☎ (747) 202-0354

Canyon[®]
ADVENTURE VANS

ELEVATE YOUR ADVENTURE